

RAINWATER HEADS

Rainwater heads are used to keep water away from the roof and fight against potential water damage stemming from rainfall. They are generally placed between the gutter and downpipe to assist in this process of protection.


When ordering a rainwater head it is vital to carefully specify the dimensions of the design. This involves knowing the width, height and length of your desired rainwater head. If you want to include a fitted downpipe outlet in your order you will also need to specify its dimensions for our team. An overflow provision can also be provided if desired.



Tapered




Conical

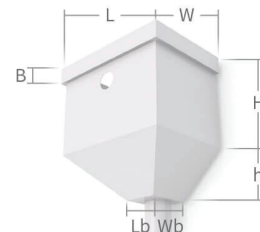

Ornate


Tapered

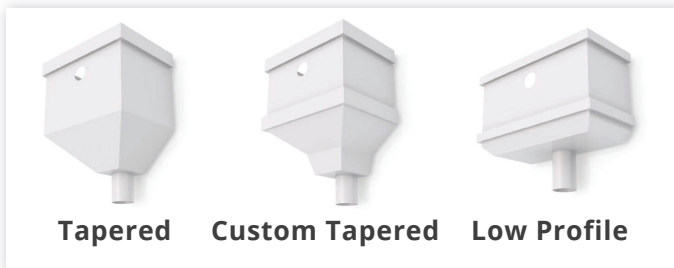

Curved



Round

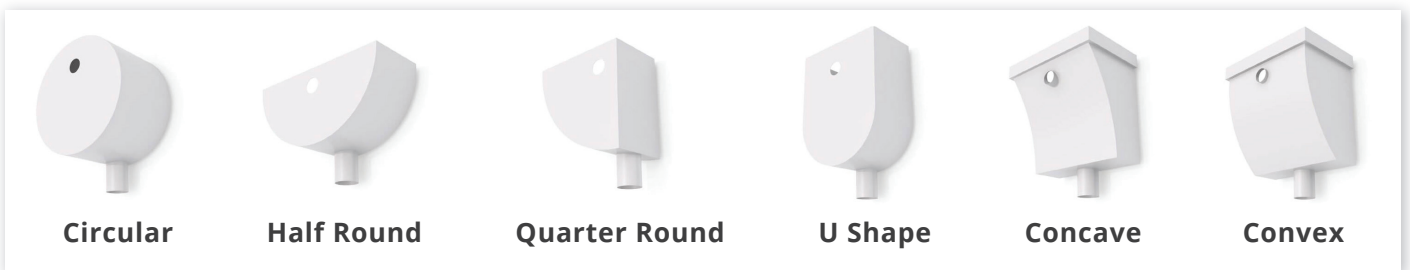

Boxed



Segmented

